Stanton Wide 6+2 Drawer Cart

SKU # 0200910120 - DARK CHERRY
SKU # 0200910210 - BLACK
SKU # 0200910410 - WHITE
SKU # 0200910560 - OAK

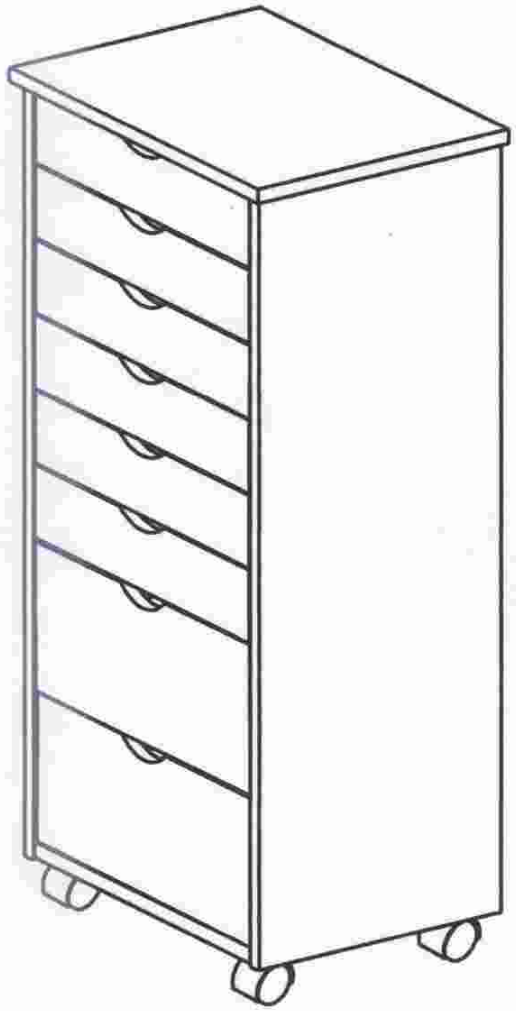

ATTENTION:
- HARDWARE PACK IS IN THE FIRST DRAWER.
- PLEASE ONLY REMOVE THE SHRINK WRAP AFTER THE CASTERS ARE FIXED AND UNIT IS UPRIGHT.

BEFORE BEGINING ASSEMBLY, CHECK TO MAKE SURE ALL PARTS AND HARDWARE ARE ACCOUNTED FOR. IT IS SUGGESTED THAT YOU SAVE THE CARTON AND PACKING MATERIAL UNTIL AFTER ASSEMBLY IS COMPLETED. SELECT A CLEAN, SMOOTH SURFACE TO WORK (SUCH AS A CARPET), FOLLOW THE EASY STEPS BELOW.

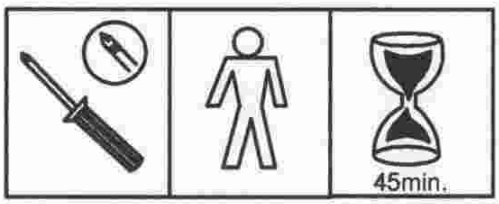

***MADE IN THAILAND**

IF PARTS ARE MISSING PLEASE CALL "1-800-240-6047" FOR INFORMATION

A	3/8" x 5/8"	16
B		04

Step 01

Remove top drawer from the cart and make sure you have all hardware as listed in the parts list. Do not put drawer back in at this time. Do not remove plastic shrink wrap yet.

HARDWARE PACK

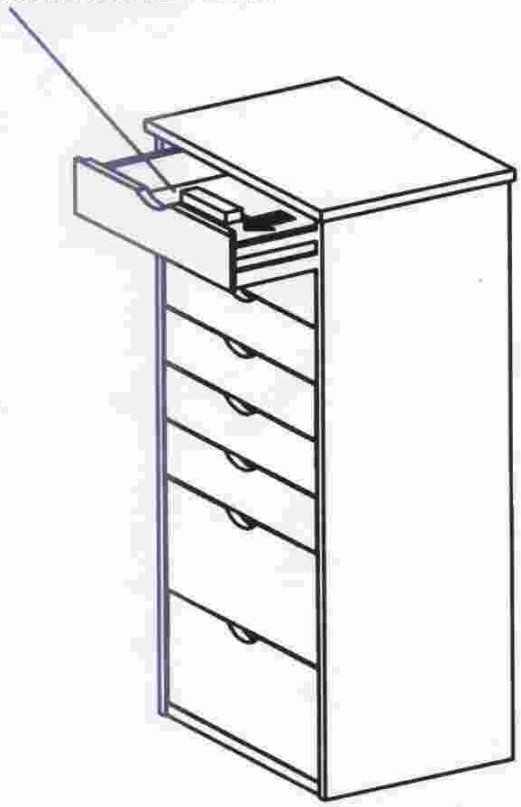

Step 02

Carefully place your Stanton. cart upside down on a clean soft surface. Avoid scratching the top. Using pre drilled holes as your guide, align and attach all four wheels (B) to the bottom of the Stanton Cart as shown using screws (A)

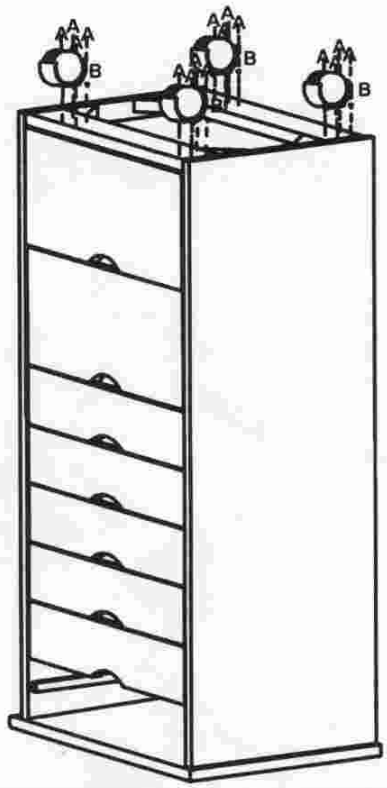

Step 03

Carefully stand unit upright. Insert top drawer. Carefully remove the plastic shrink wrap. If you need to cut the shrink wrap off, do so on the back of the unit, not on the front, sides, or top.

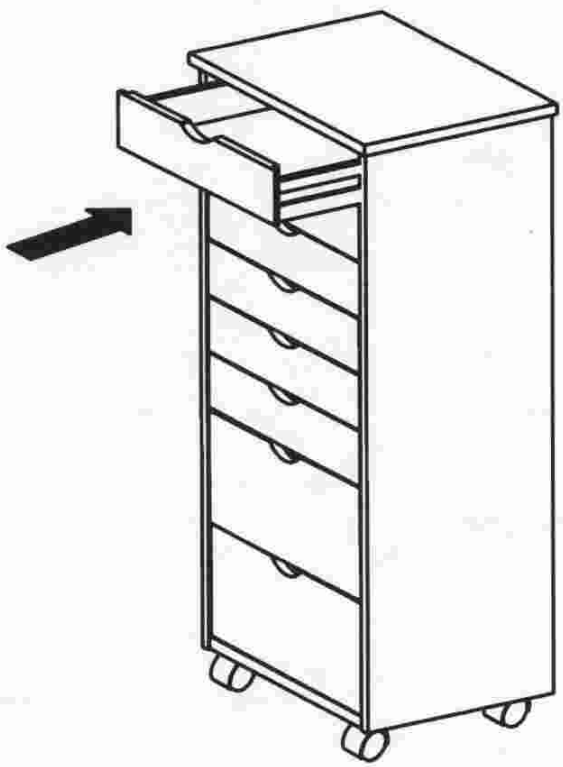

WARNING

To help prevent from tip-over, it's recommended to mount this unit to a wall using keyhole hangers provided.

However after keyhole hangers installed, kindly noted that it will cease a cart from movable's functions.

Follow three simple steps below if decide to install this anti-tip-over hardware;

C		2
D		2

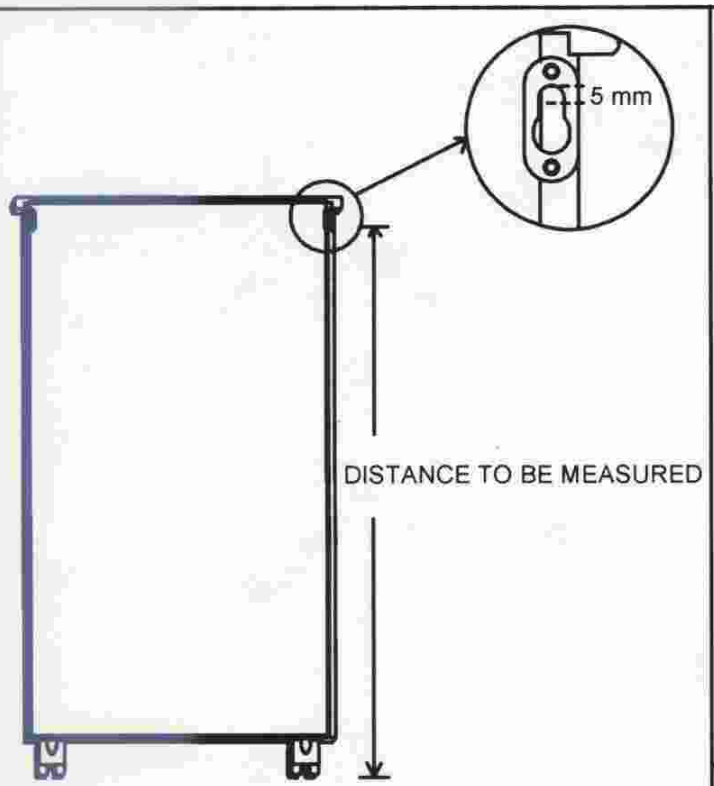

Step 1.

Measure a distance from ground to 5mm under top of a keyhole.
Transfer to wall, mark and drill pilot holes
Repeat again for the other side keyhole hanger.

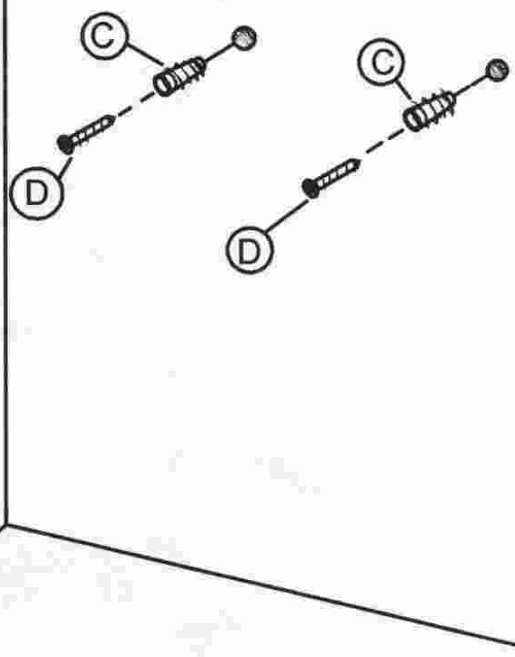

Step 2.

Insert plastic anchor (C) into pilot holes
Drive screws (D) into anchors leaving about 1/4" exposed.

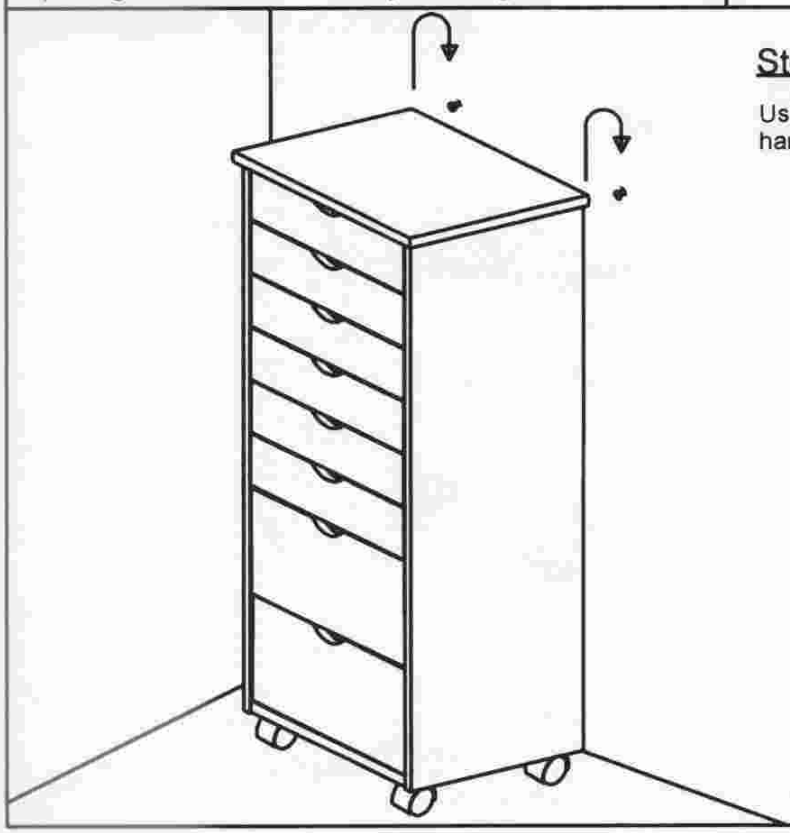

Step 3.

Using two persons to lift a cart and carefully
hang it on exposed screw-heads as shown in diagram.